

ASSEMBLY INSTRUCTIONS – 12 TIER CONTINUOUS DISPLAY WOOD GRAIN



PUSH FOR INSERT THE 6 BLUE PIN ON BASE PIECE



INSERT THE SIDE PANEL AND TURN RIGHT TO FIX IT



FIX 2 THE METAL BRAKET ON THE SIDE PANELS



CLIP THE CROSS PIECE WITH A BLACK EDGE IN FRONT



FIX THE HEADER WITH THE METAL BRACKET ON TOP




TO FIX THE HARDWARE FOR STORAGE FRONT PANEL, INSERT IN THE HOLE AND CLIP (NO SCREW)



CLIP THE METAL PIECE TO FIX THE FRONT PANEL OF THE STORAGE SECTION. INSTALL HANDLE



INSTALL THE 3 SECTIONS OF ROWS AND PUT THE PLASTIC PIECE ON THE TOP OF ROWS.

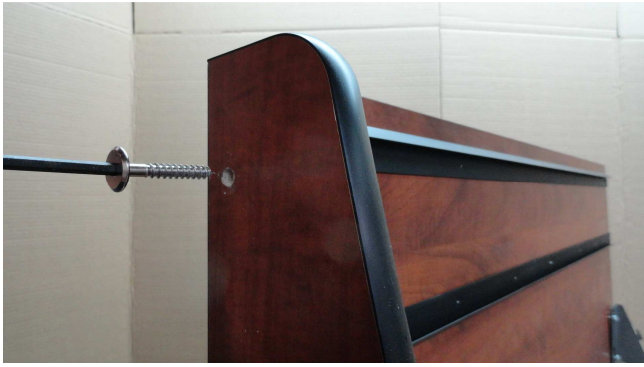

FIX THE END PANELS AND THE HEATHER WITH THE LONGER SCREW.

COMPLETE TO FIX PANEL WITH THE OTHER SCREWS.

